



RM-C200 Installation Guide - Cisco Mode No 3rd Party Control System, No Audio DSP

Revision A, 5/9/2023

Cisco Codec Plus



- Audio —
- Control —
- Power —
- SCTLink™ —
- Control/Power —

RM-PRO-M3™ Cable Bundle

Includes [3] Male TRRS to Male Euro-Block Cables

RM-C200-RX™ (Front View)



Switch Settings
1 2 3 4 5 6 7 8

RM-C200-TX™ (Front View)




Switch Settings
1 2 3 4 5 6 7 8

WPS-12 30VDC
100-240V 47-63Hz
Power Supply




Clockaudio
CRM 200S-RF RGB

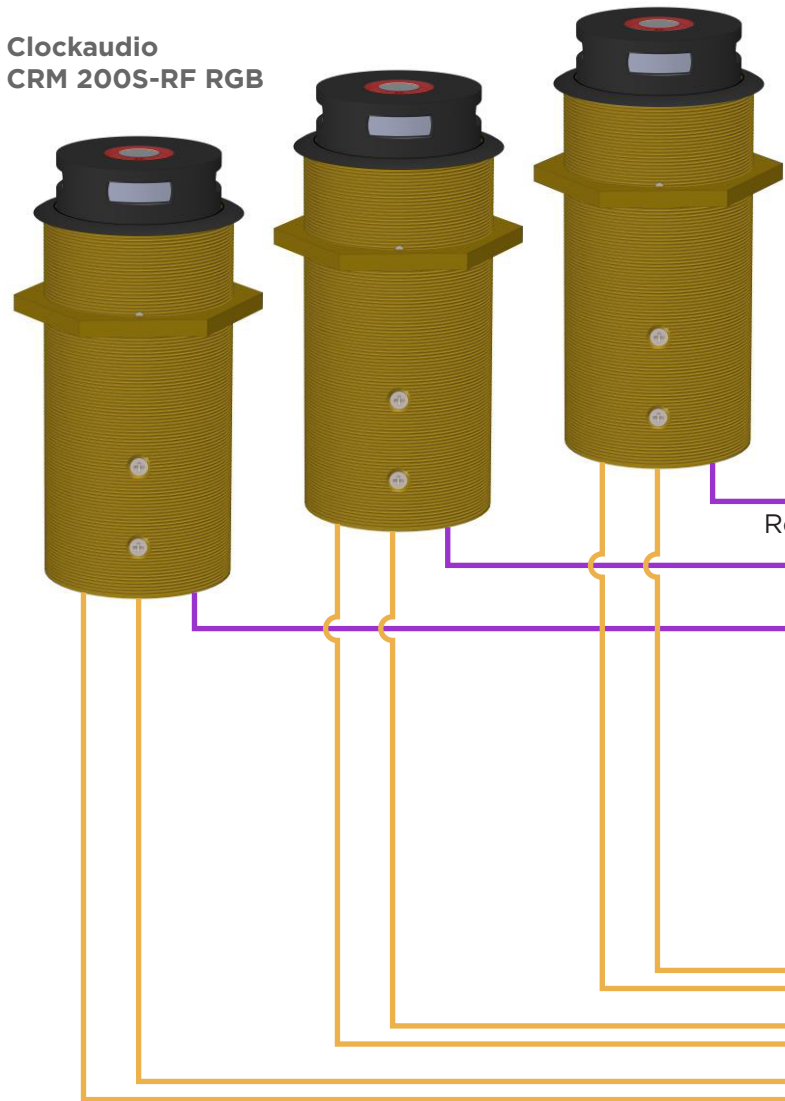

RM-C200-RX™ (Rear View)

RM-C200-TX™ (Rear View)

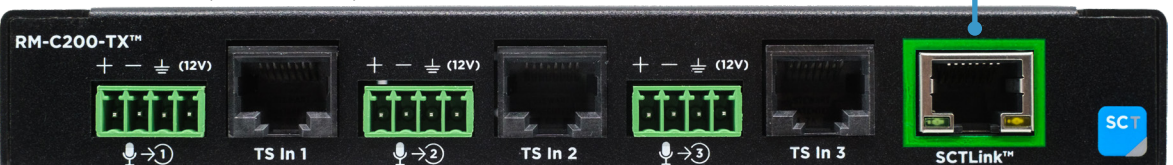

Red (+), White (-), Shield (⊥)


RCC-C015-2.0M
RJ45 to RJ45
UTP Control Cable



Clockaudio
TS-C1

SCTLink™ Cable Specs

Integrator-Supplied CAT6 STP/UTP Cable
T568A or T568B (10m-100m min/max)

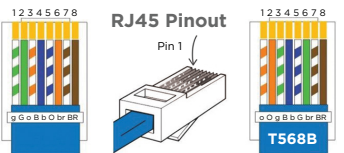

The SCTLink™ cable must always be a single, point-to-point CAT cable with no couplers or interconnections.