



RCWV4 Channel Wall Mount

INCLUDED PART LIST


- No. 1** Channel Mount Adapter Plate, 822-1162 (Qty 1)
- No. 2** Adjustable Channel, 833-1162 (Qty 1)
- No. 3** 8-32 Locking Hex Nut, 850-0005 (Qty 2)
- No. 4** Camera Base, 808-1162 (Qty 1)
- No. 5** 8-32x7/16" Torx Screw, White, 860-0016 (Qty 2)
or Black, 860-0017 (Qty 2)
- No. 6** 6-32x1/4" Torx Screw, White, 860-0009 (Qty 2)
or Black, 860-0053 (Qty 2)

OPTIONAL 2-GANG DRESS PLATE ACCESSORY KIT


- No. 7** Dress Plate, 813-1162 (Qty 1)
- No. 8** 8-32x7/16" Torx Screw, White, 860-0016 (Qty 2)
- No. 9** 8-32 Hex Nut, 850-0005 (Qty 2)

ASSEMBLY INSTRUCTIONS

STEP 1: Attach Camera Base (No. 4, Qty 1) to Adjustable Channel (No. 2, Qty 1) using 8-32 Hex nuts (No. 5, Qty 2).

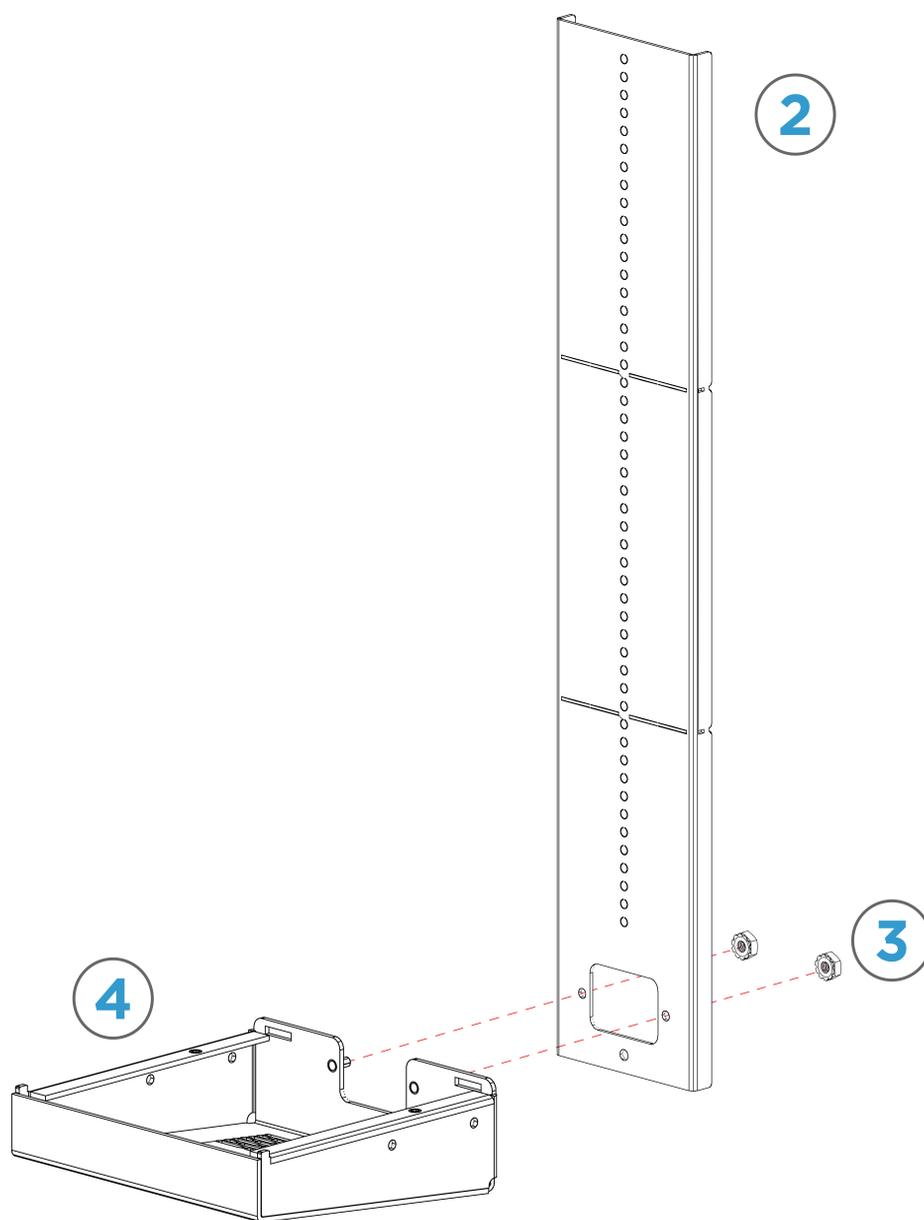

STEP 2: Attach Channel Mount Adapter Plate (No. 1, Qty 1) to masonry wall or standard wall box using appropriate screws (not included). Then attach assembly from step 1 to Adapter Plate using 8-32x7/16" Torx Screws (No. 5, Qty 2). If using 2-gang Dress Plate (No. 7, Qty 1) install in front of Adjustable Channel. Use accessory kit hardware (No. 8 & 9) to attach dress plate in alternate locations if desired.

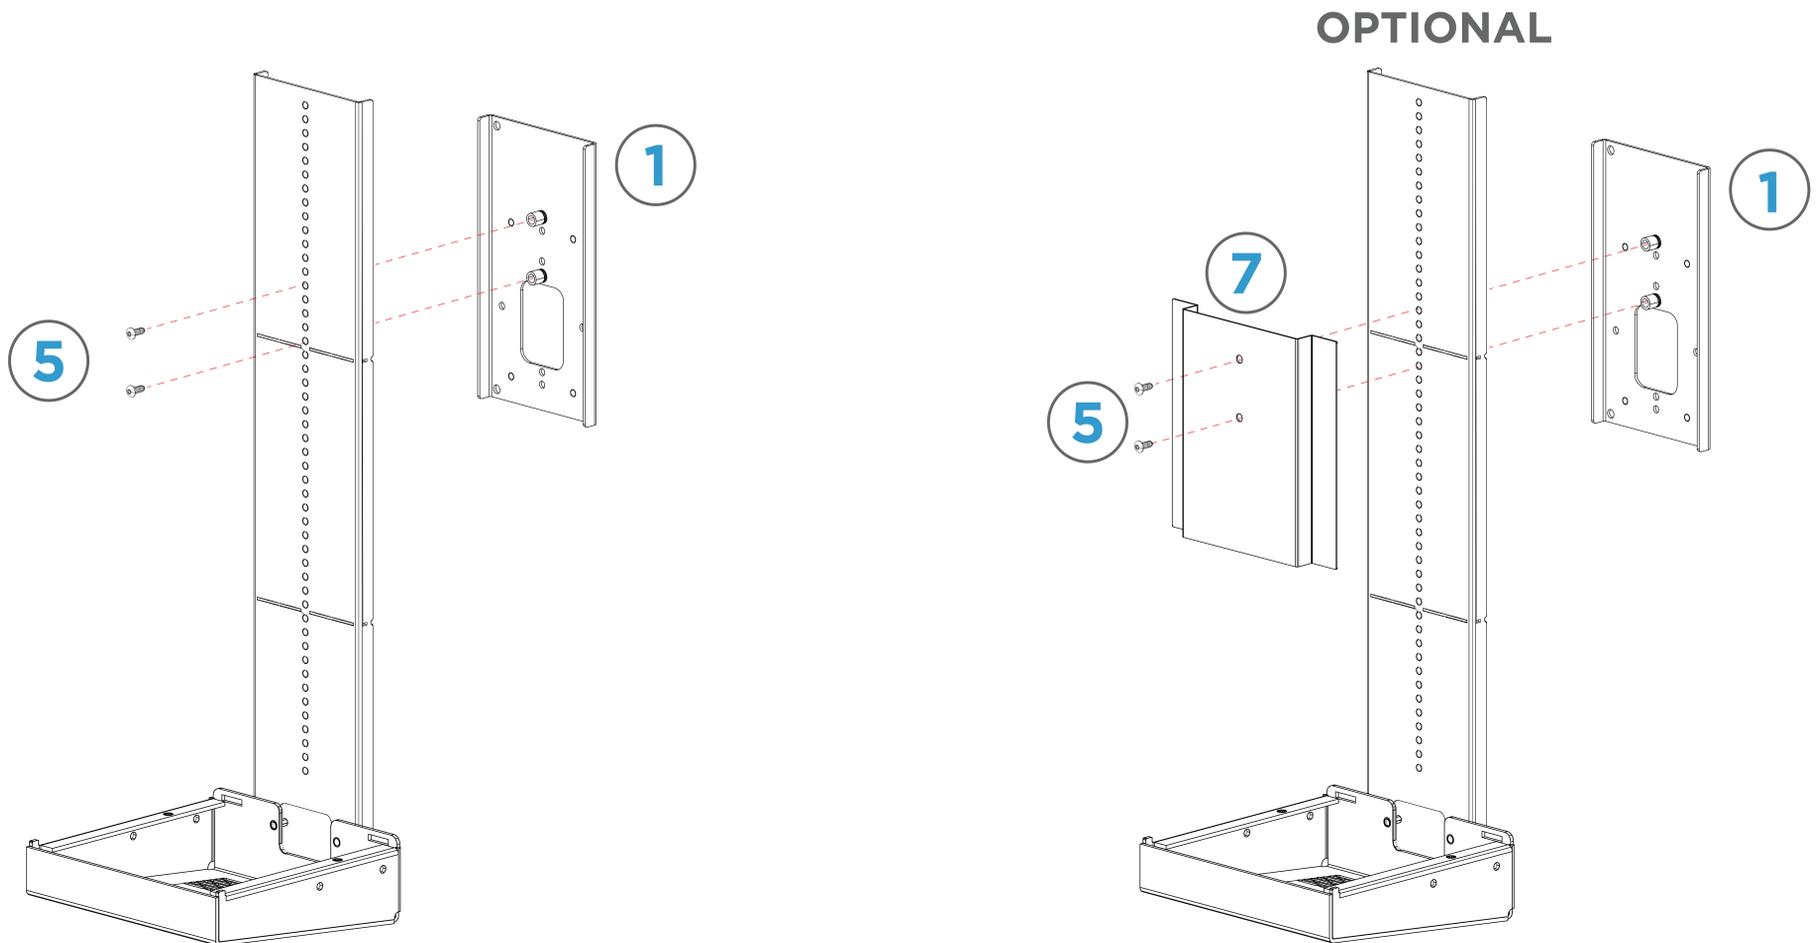

STEP 3: If using an SCT camera extension kit, insert the Camera End module into the Camera Base and attach cables. Attach camera to Camera Plate using supplied hardware. Then, attach Camera Plate to Camera Base using 6-32x1/4" Flat Head Torx Screws (No. 6, Qty 2).

Note: Shape of Camera Plate and supplied hardware varies depending on SKU ordered.

Reference Only:
Camera and Camera
Plate varies

