



RCWV2-E70™ Wall Mount for Poly E70

INCLUDED PART LIST

- No. 1** Channel Mount Adapter Plate, 801-1162 (Qty 1)
- No. 2** Adjustable Channel, 802-1162 (Qty 1)
- No. 3** Camera Bracket, 828-1162 (Qty 1)
- No. 4** Camera Base, 829-1162 (Qty 1)
- No. 5** 1/4-20x5/16" Phillips Screw, 860-0018 (Qty 1)
- No. 6** 8-32x7/16" Torx Screw, White, 860-0016 (Qty 2)
- No. 7** 8-32 Hex Nut, 850-0005 (Qty 2)
- No. 8** 6-32x1/4" Flat Head Torx Screw, 860-0009 (Qty 2)

PARTS NOT INCLUDED


- No. 9** Poly E70 (Qty 1)

OPTIONAL 2-GANG DRESS PLATE ACCESSORY KIT


- No. 10** Dress Plate, 813-1162 (Qty 1)
- No. 11** 8-32x7/16" Torx Screw, White, 860-0016 (Qty 2)
- No. 12** 8-32 Hex Nut, 850-0005 (Qty 2)

ASSEMBLY INSTRUCTIONS


STEP 1: Attach Camera Base (No. 4, Qty 1) Adjustable Channel (No. 2, Qty 1) using 8-32 Hex nuts (No. 7, Qty 2).

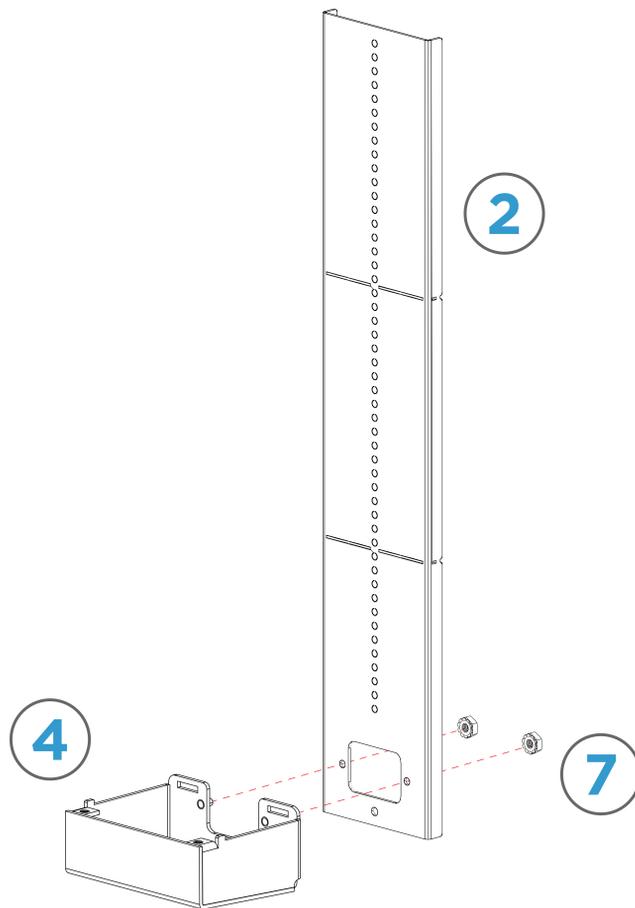


STEP 2: Attach Camera Bracket (No. 3, Qty 1) to Poly E70 (No. 9, Qty 1) using 1/4-20x5/16" Phillips Screw (No. 5, Qty 1).

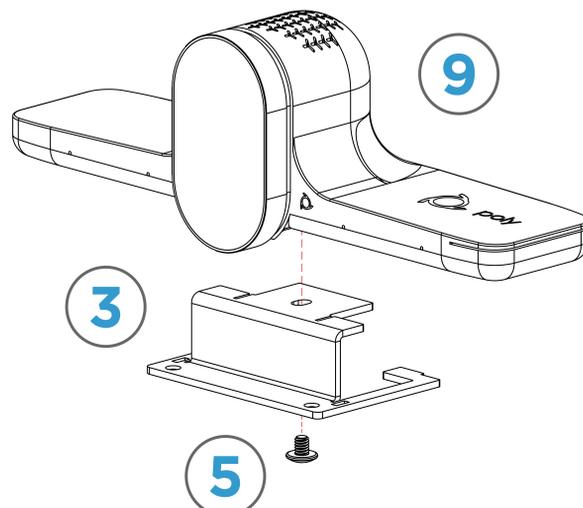

STEP 3: Attach Camera Bracket to Camera Base using 6-32x1/4" Flat Head Torx Screws (No. 8, Qty 2).

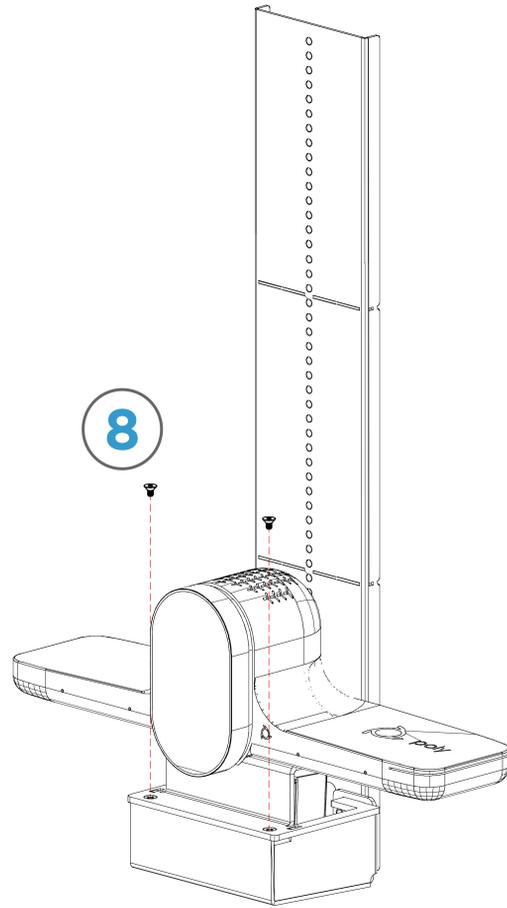

STEP 4: Attach Channel Mount Adapter Plate (No. 1, Qty 1) to masonry wall or standard wall box using appropriate screws (not included). Then attach camera assembly to Adapter Plate using 8-32x7/16" White Torx Screws (No. 6, Qty 2). If using 2-gang Dress Plate (No. 10, Qty 1) install in front of Adjustable Channel. Use accessory kit hardware (No. 11 & 12) to attach dress plate in alternate locations.

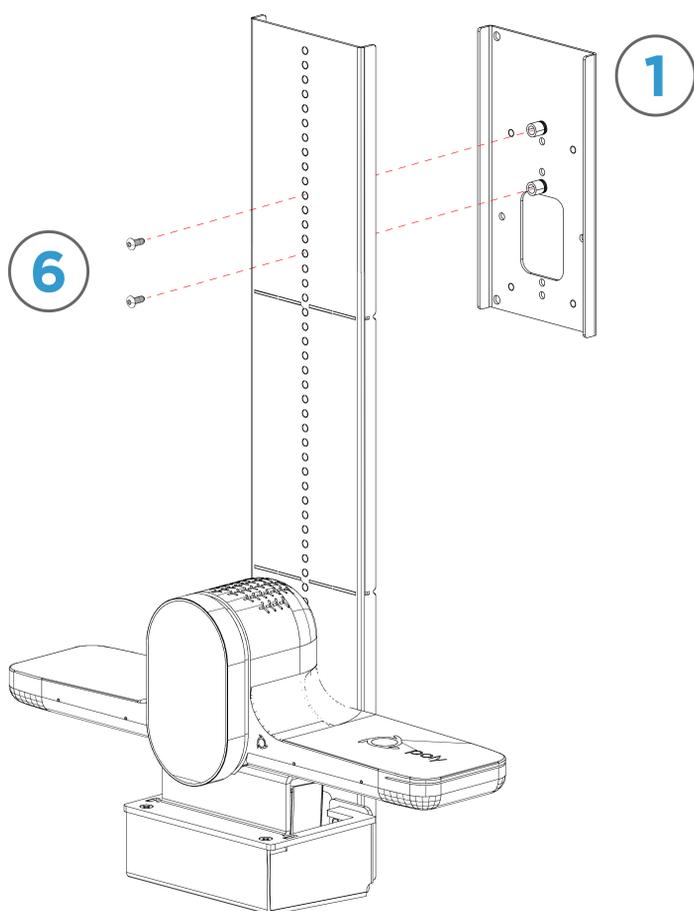

OPTIONAL

