

RC-CUBBY-STU™ Cubby Wall Mount for Poly Studio

INCLUDED PART LIST


No. 1 Cubby Backbox, 804-1147 (Qty 1)
No. 2 Wall Clamps, 800-1107 (Qty 4)
No. 3 Camera Plate, 815-1147 (Qty 1)
No. 4 Adapter Plate, 814-1147 (Qty 1)
No. 5 Cubby Split Face Plate Bottom, 806-1147 (Qty 1)
No. 6 Cubby Split Face Plate Top, 807-1147 (Qty 1)
No. 7 6-32 x 1/4", Oval Head Phillips Screw, 860-0058 (Qty 1)

PARTS NOT INCLUDED


No. 8 Poly Studio (Qty 1)

ASSEMBLY INSTRUCTIONS


STEP 1: Install Cubby Backbox ([No. 1, Qty 1](#)) into wall opening with Wall Clamps ([No. 2, Qty 4](#)). For detailed instructions refer to the RC-CUBBY Installation Guide on www.soundcontrol.net.

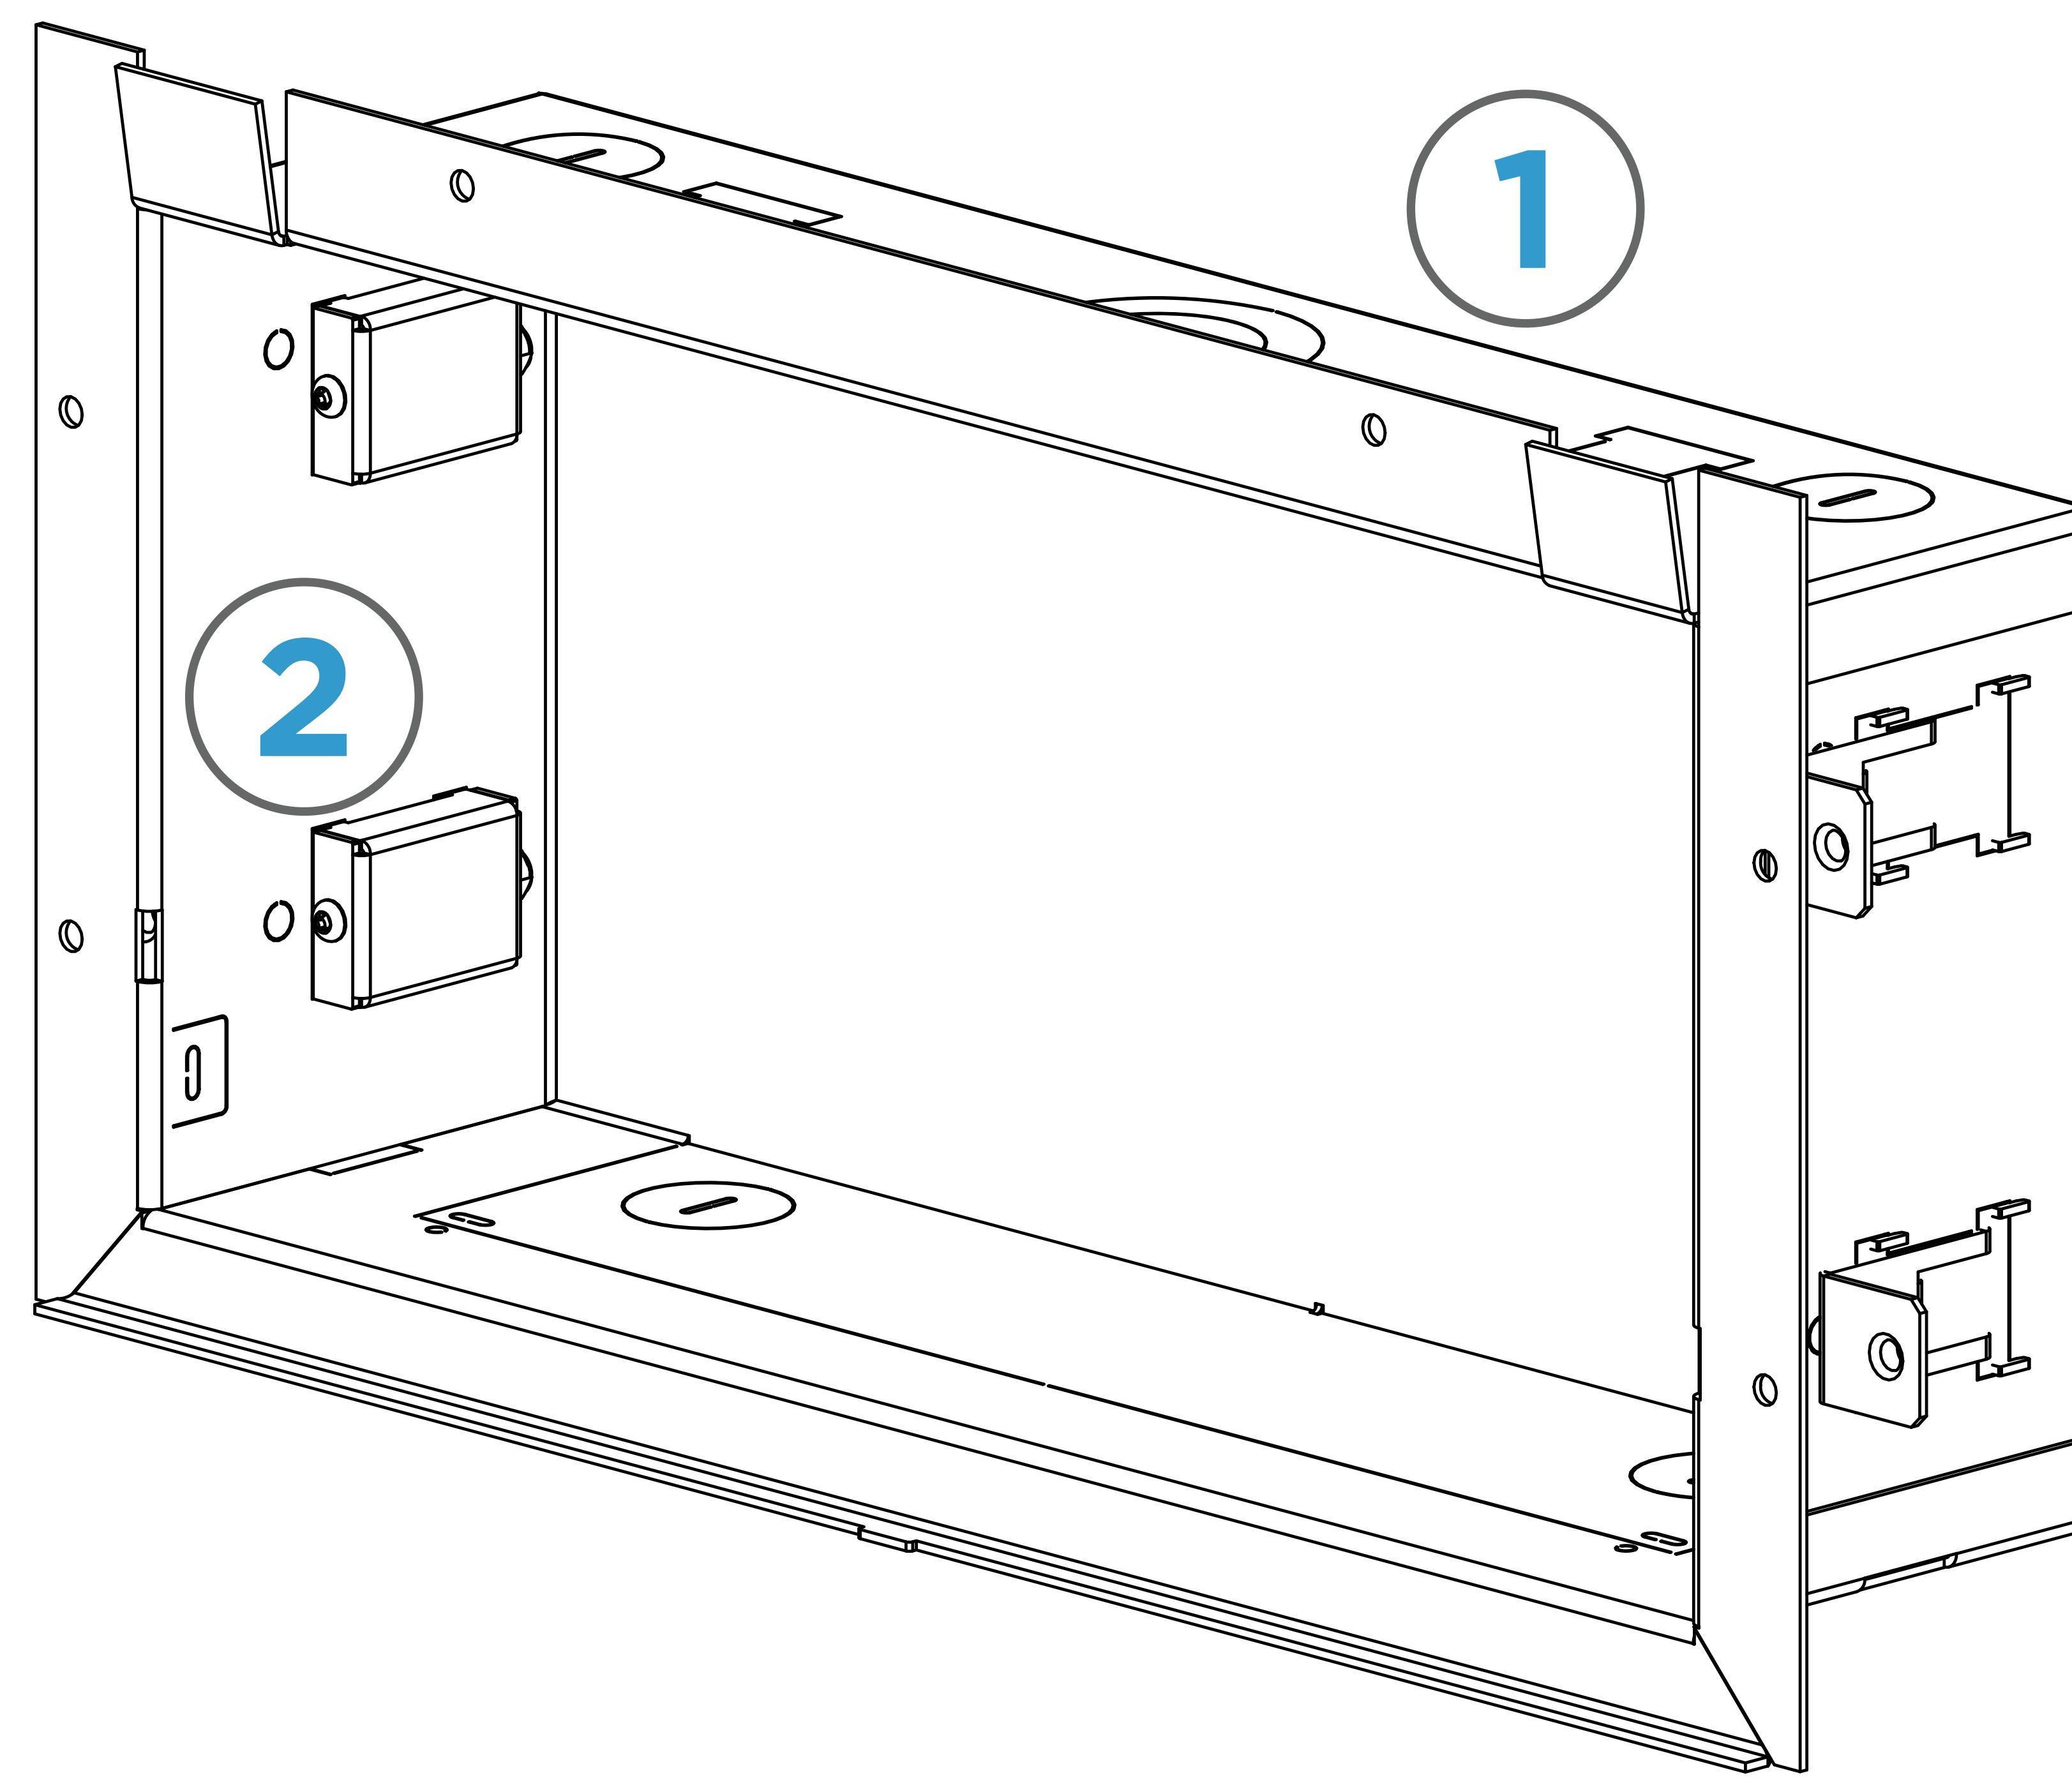


STEP 2: Hook Cubby Split Face Bottom ([No. 5, Qty 1](#)) into slots of Backbox.

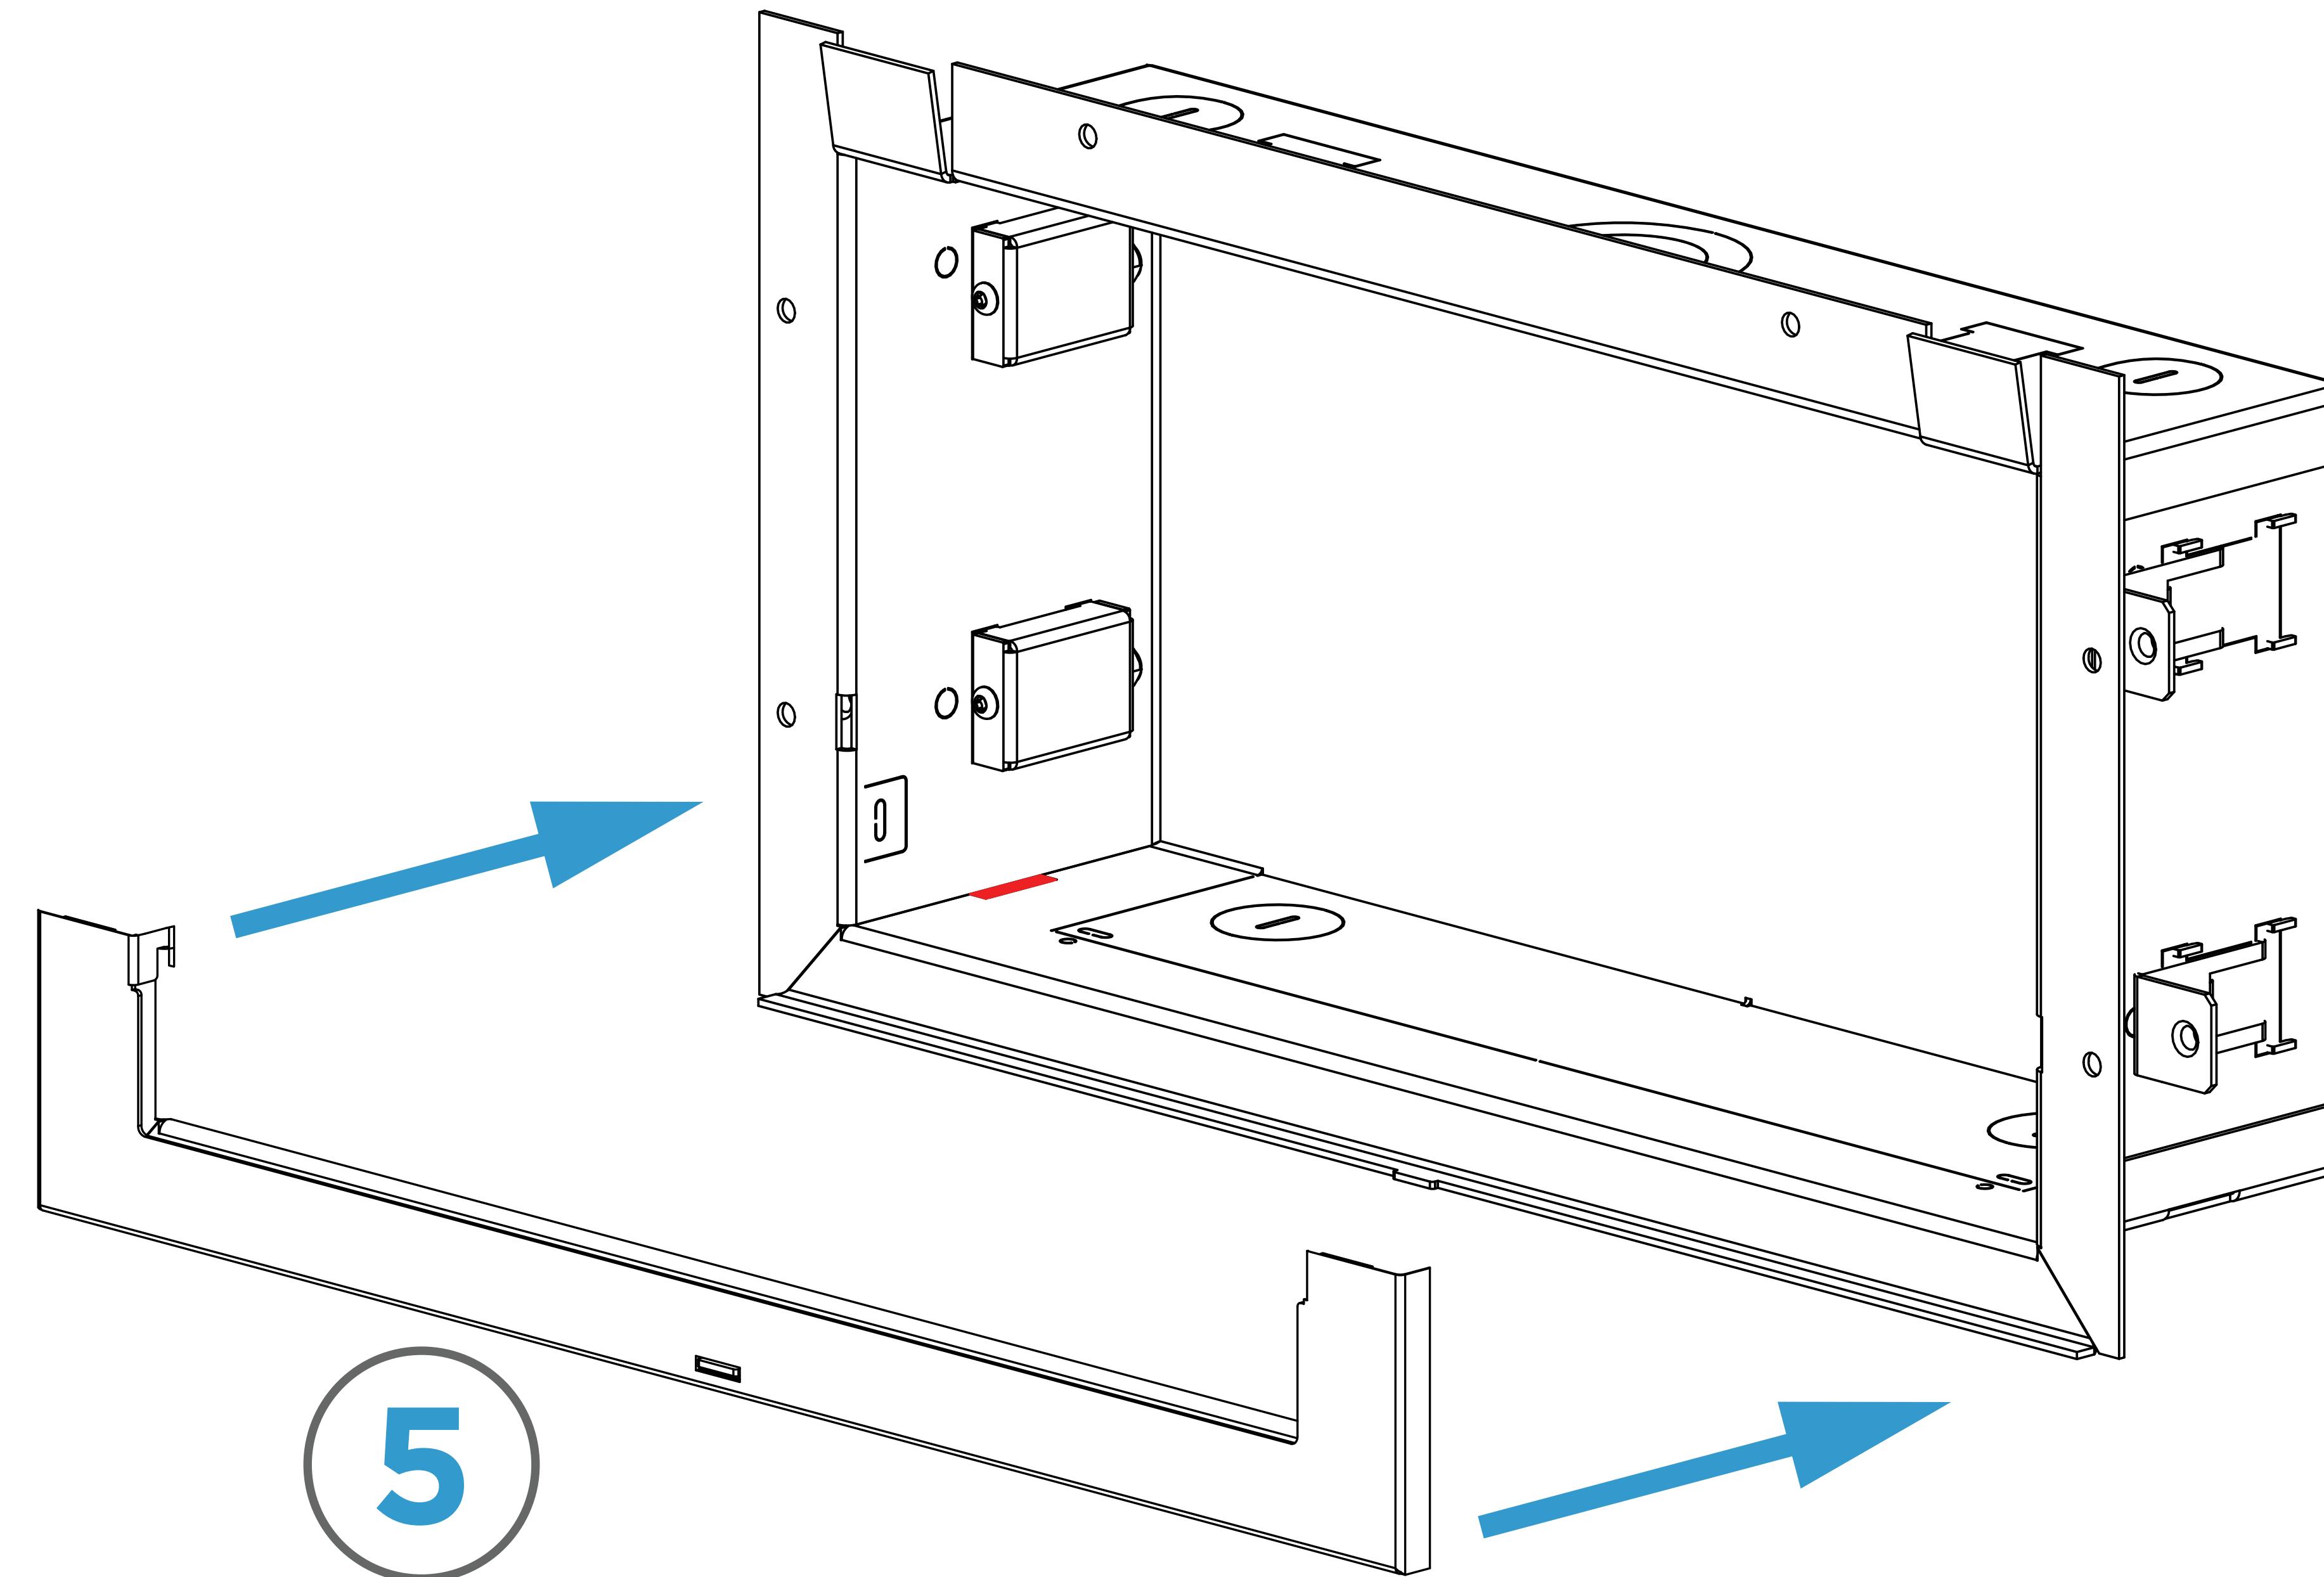

STEP 4: Slide Camera Plate (No. 3, Qty 1) down into Cubby slots (shown in red) and push forward to engage. Then pry tabs inward to lock Camera Plate in place.

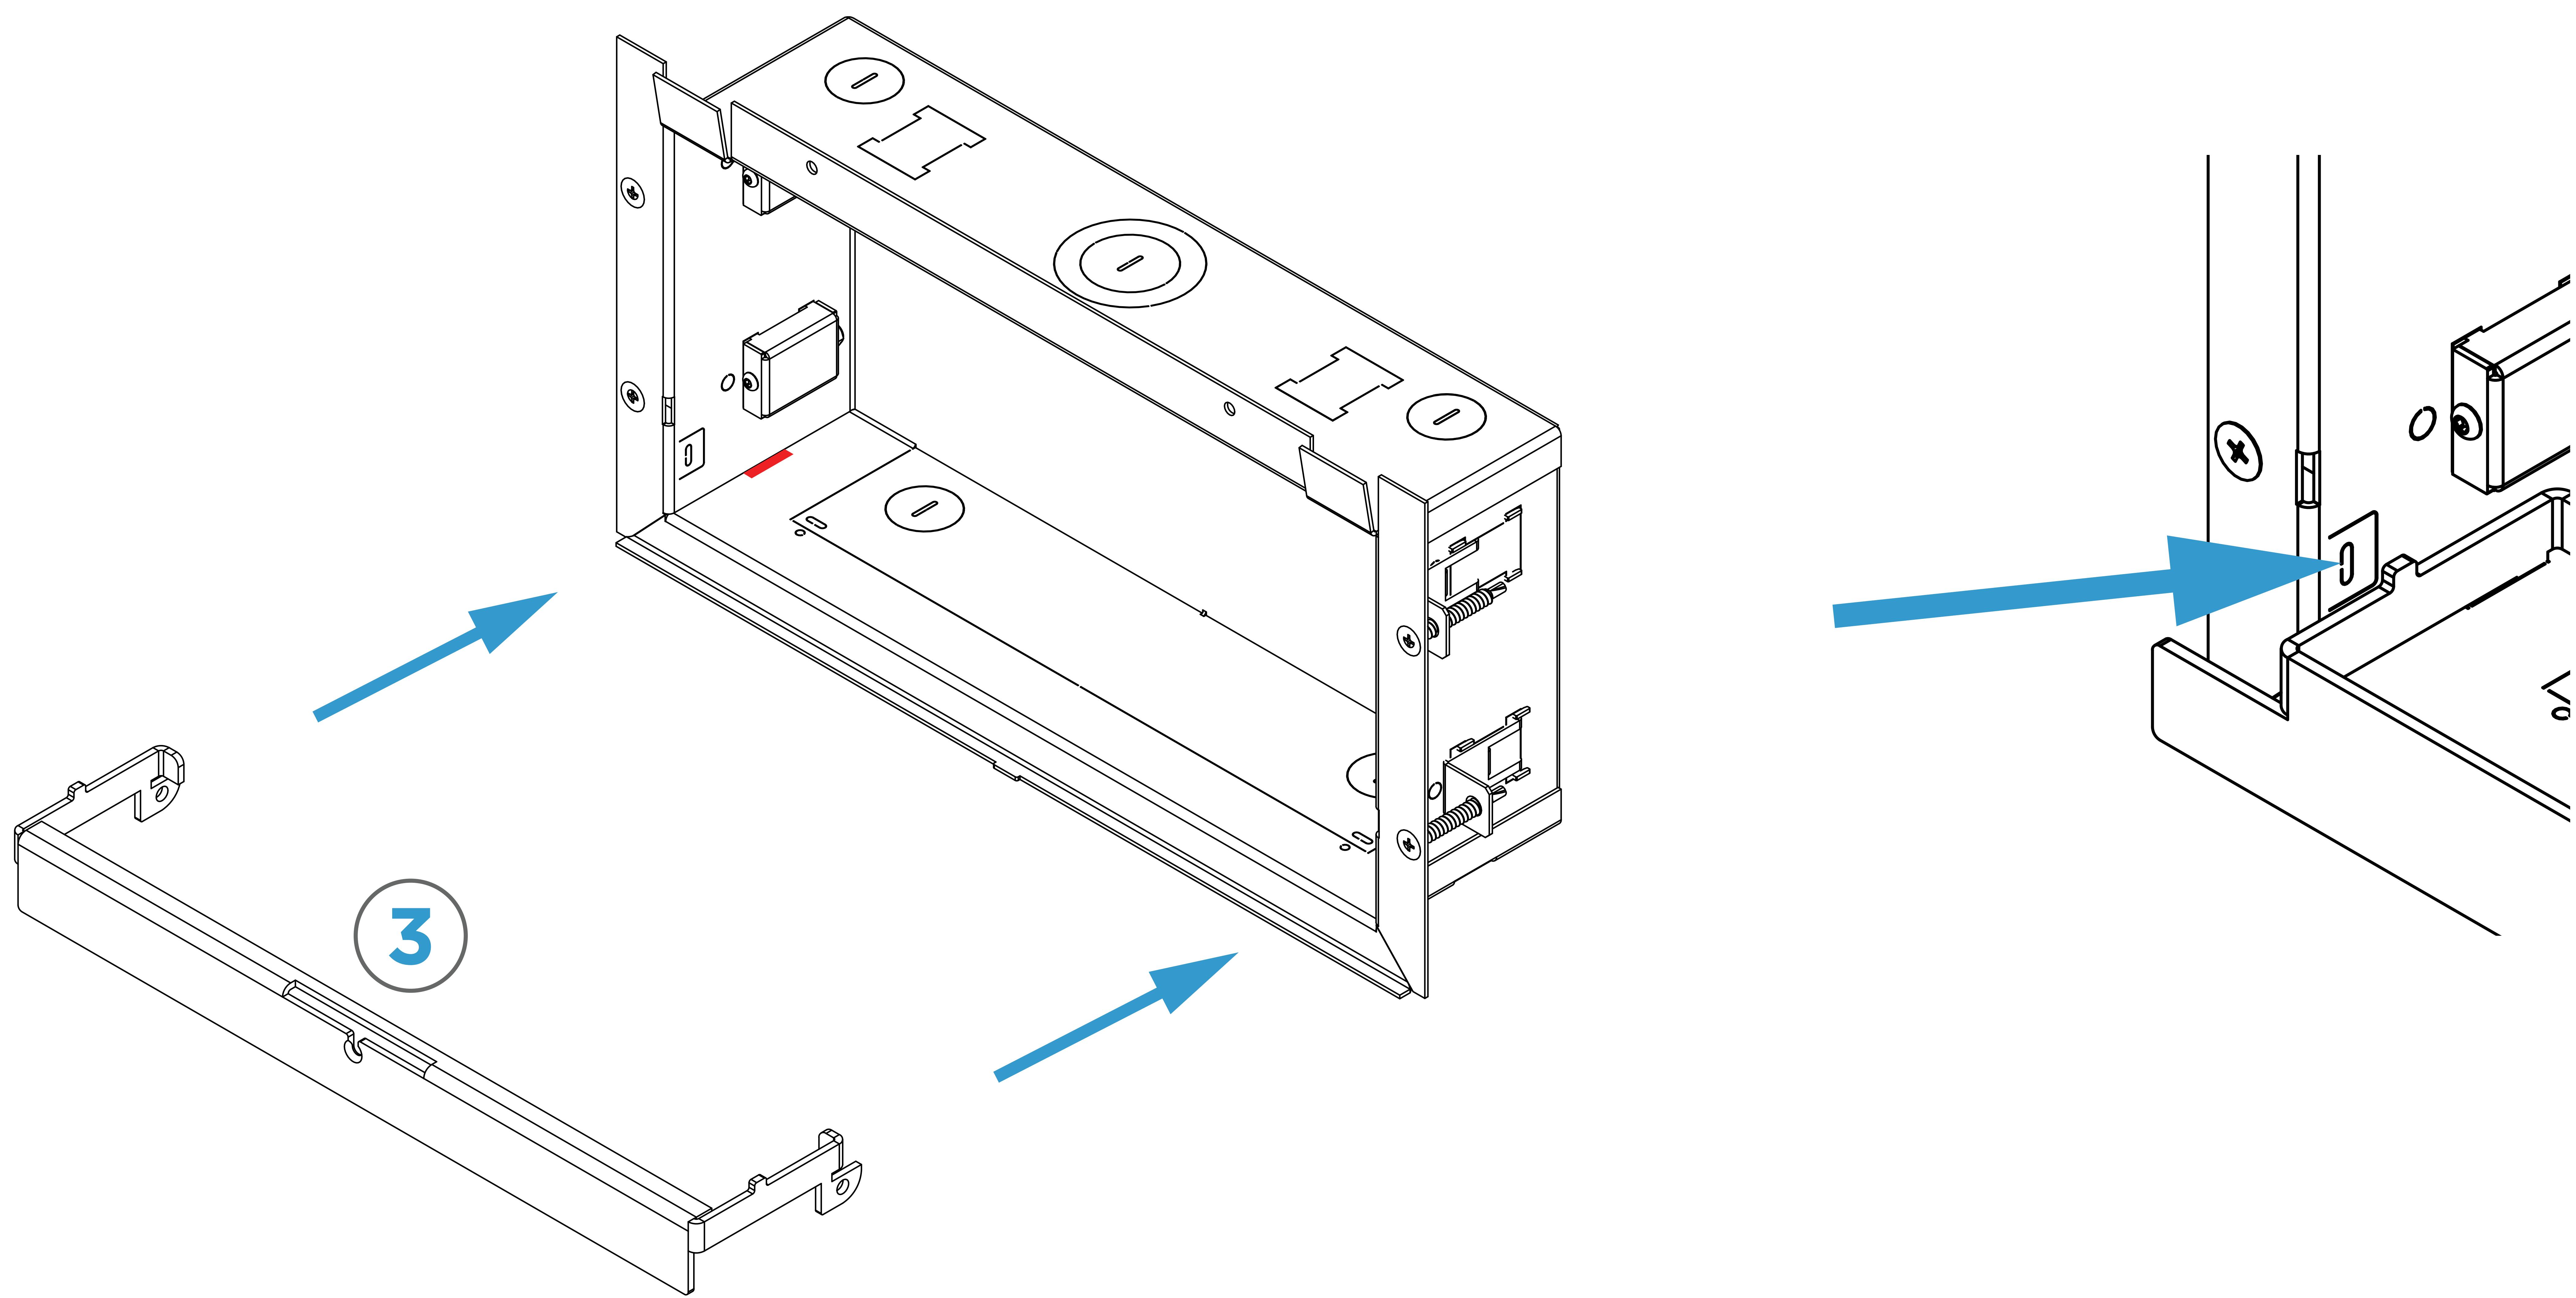

STEP 5: Attach Adapter Plate (No. 4, Qty 1) to Poly Studio (No. 8, Qty 1) using screws supplied by Poly.

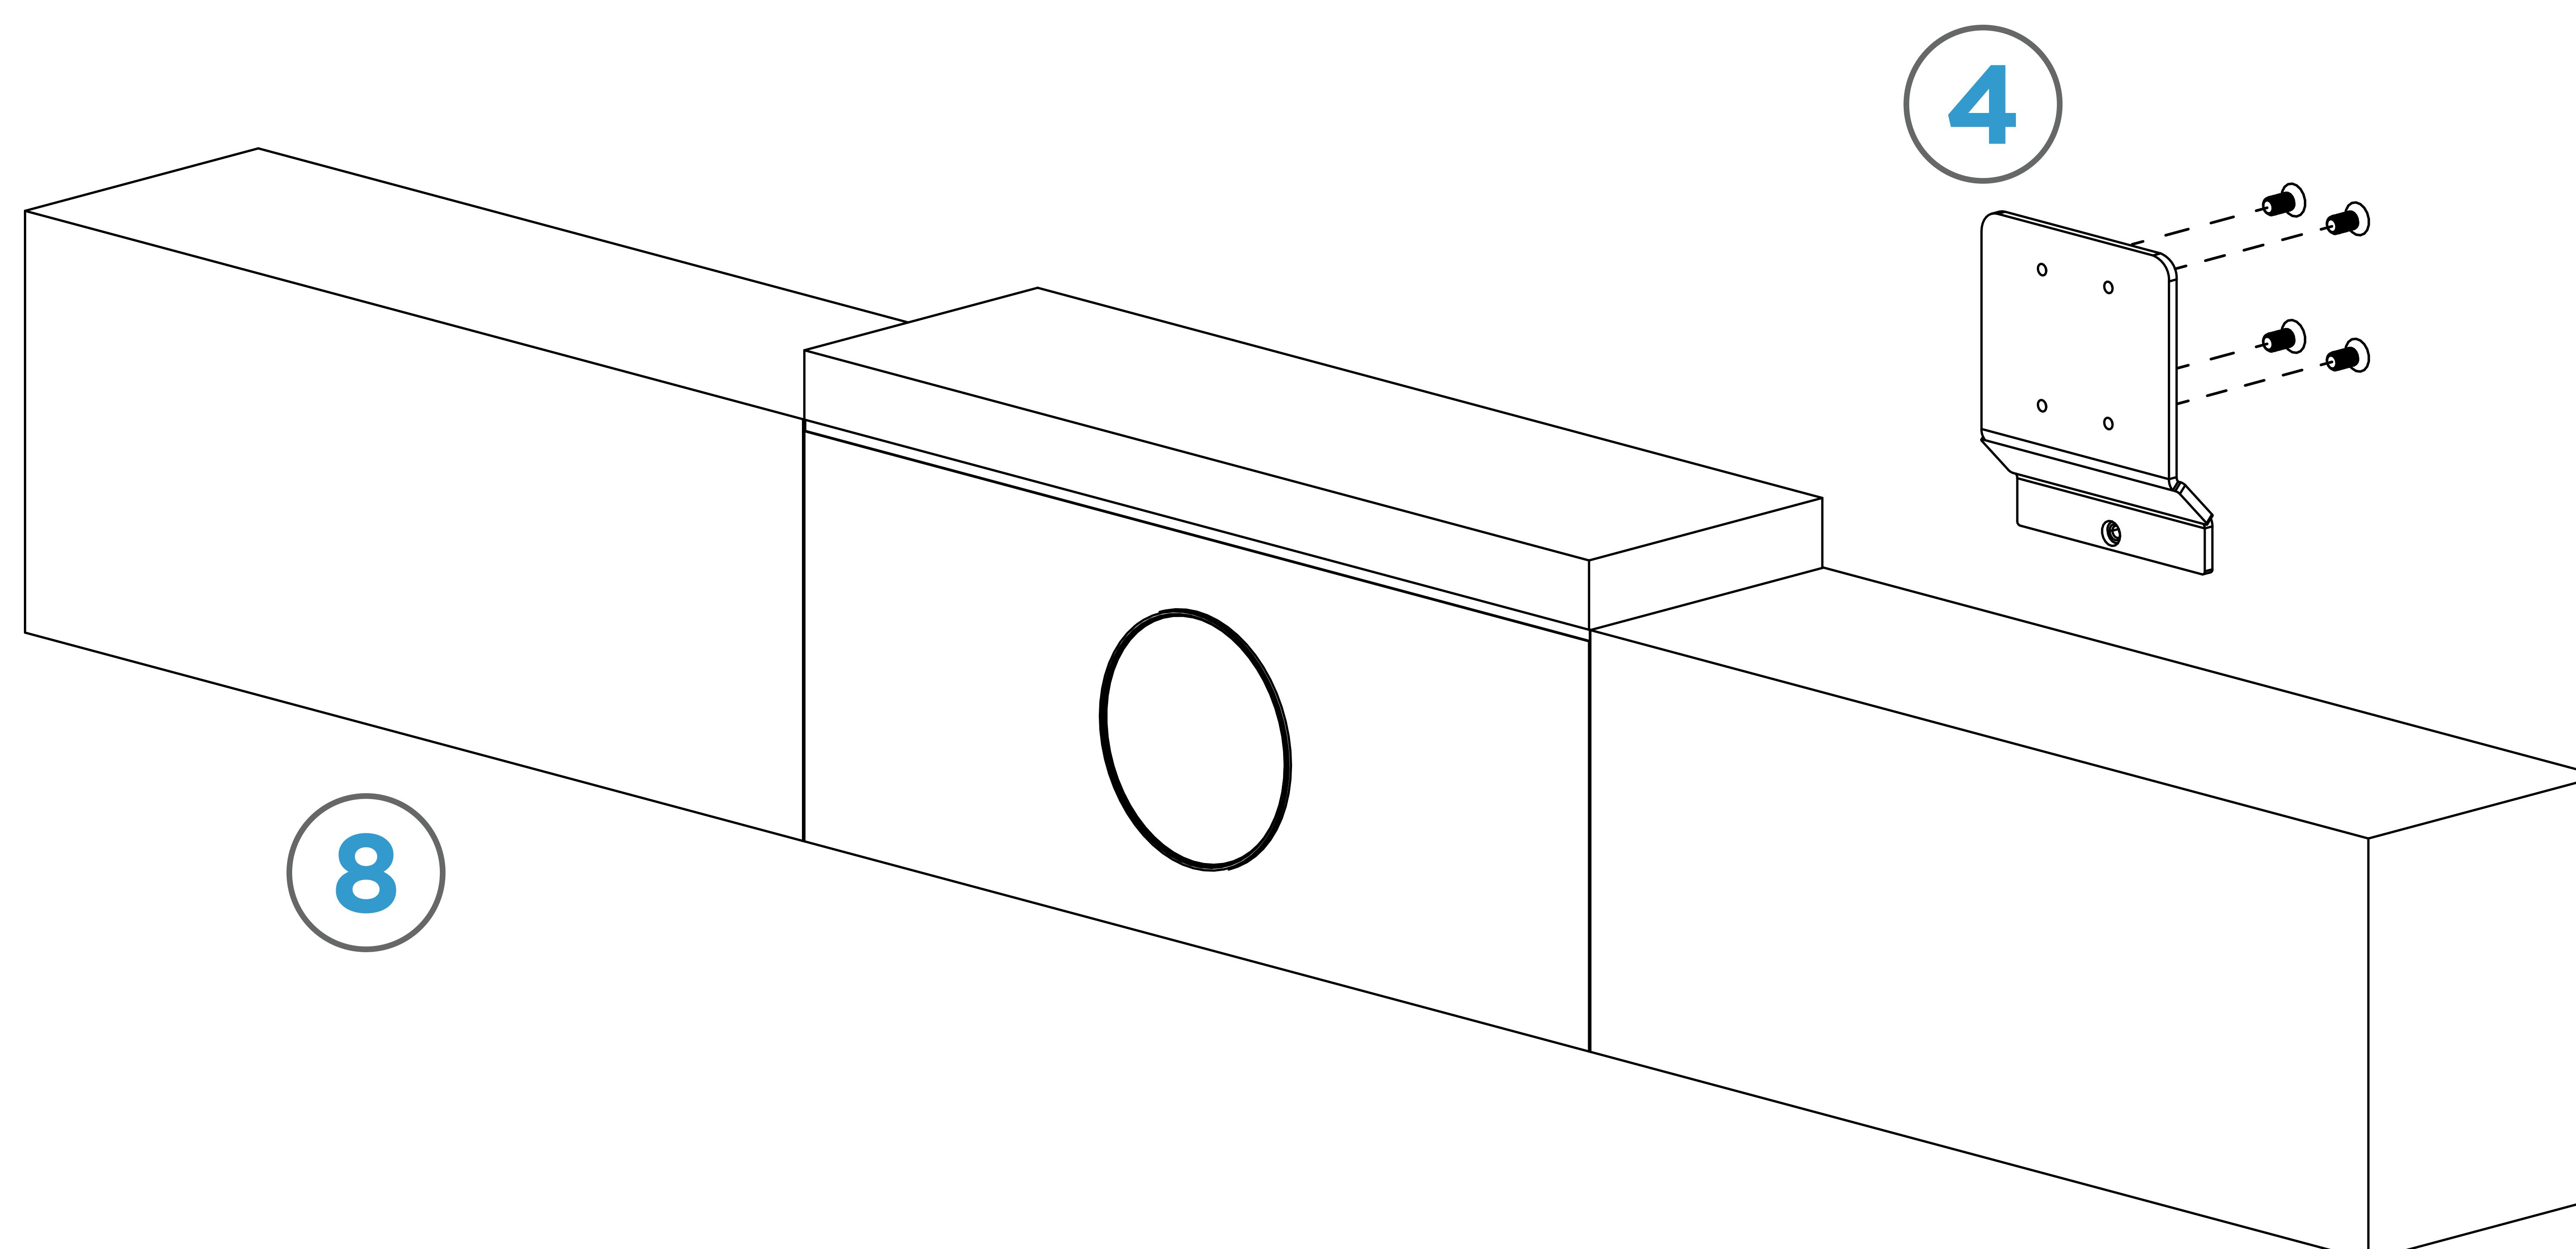

STEP 6: Slide camera assembly into slot of Adapter Plate and secure with 6-32 x 1/4" Phillips screw (No. 7, Qty 1). Then slide Cubby Face Plate top (No. 6, Qty 1) down onto tabs in Cubby Backbox.

