



RC-CUBBY-CQC Backbox Preparation and Installation

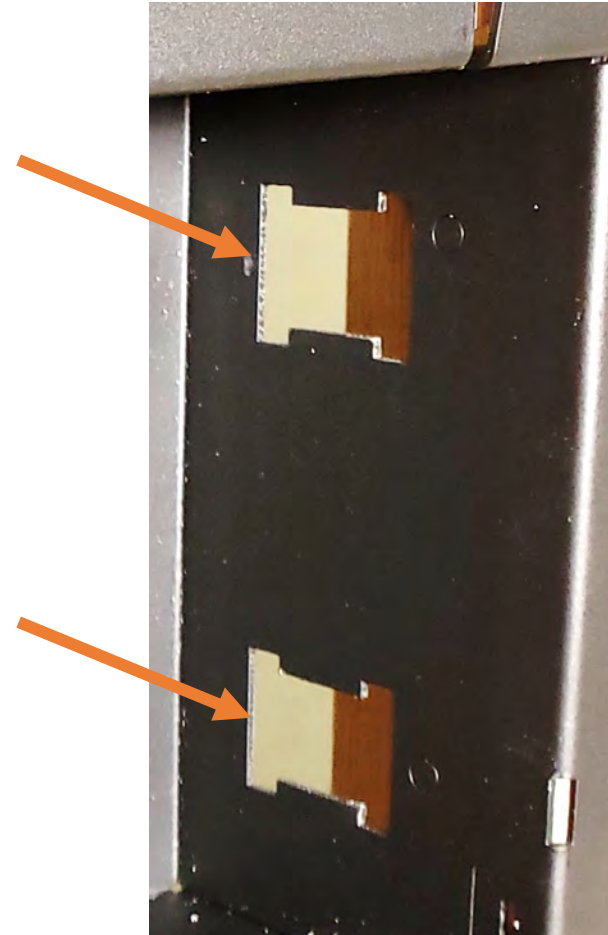

Sound Control
Technologies

Remove the knockouts for the wall clamps. You can use opposite corners or all four (two left and two right).

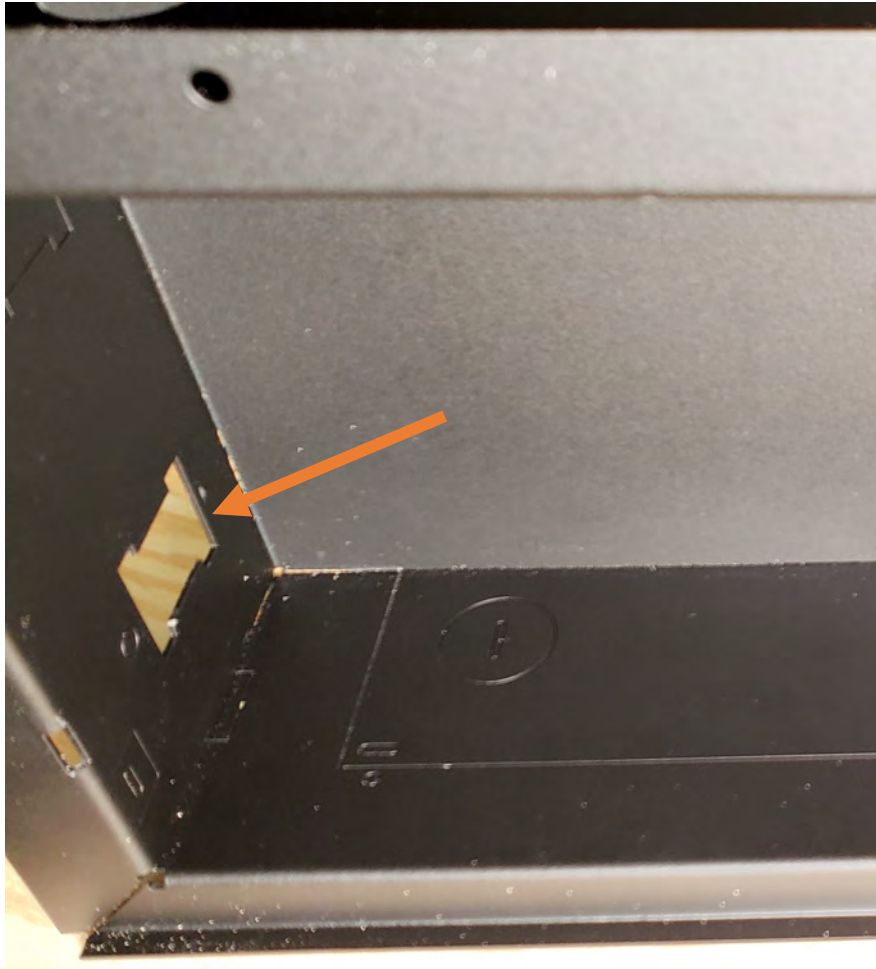

Now we will knock out the areas outlined in orange.




Start with the slots, which will make it easier to pry out the large rectangle.



Now we're ready to install the backbox into the wall.



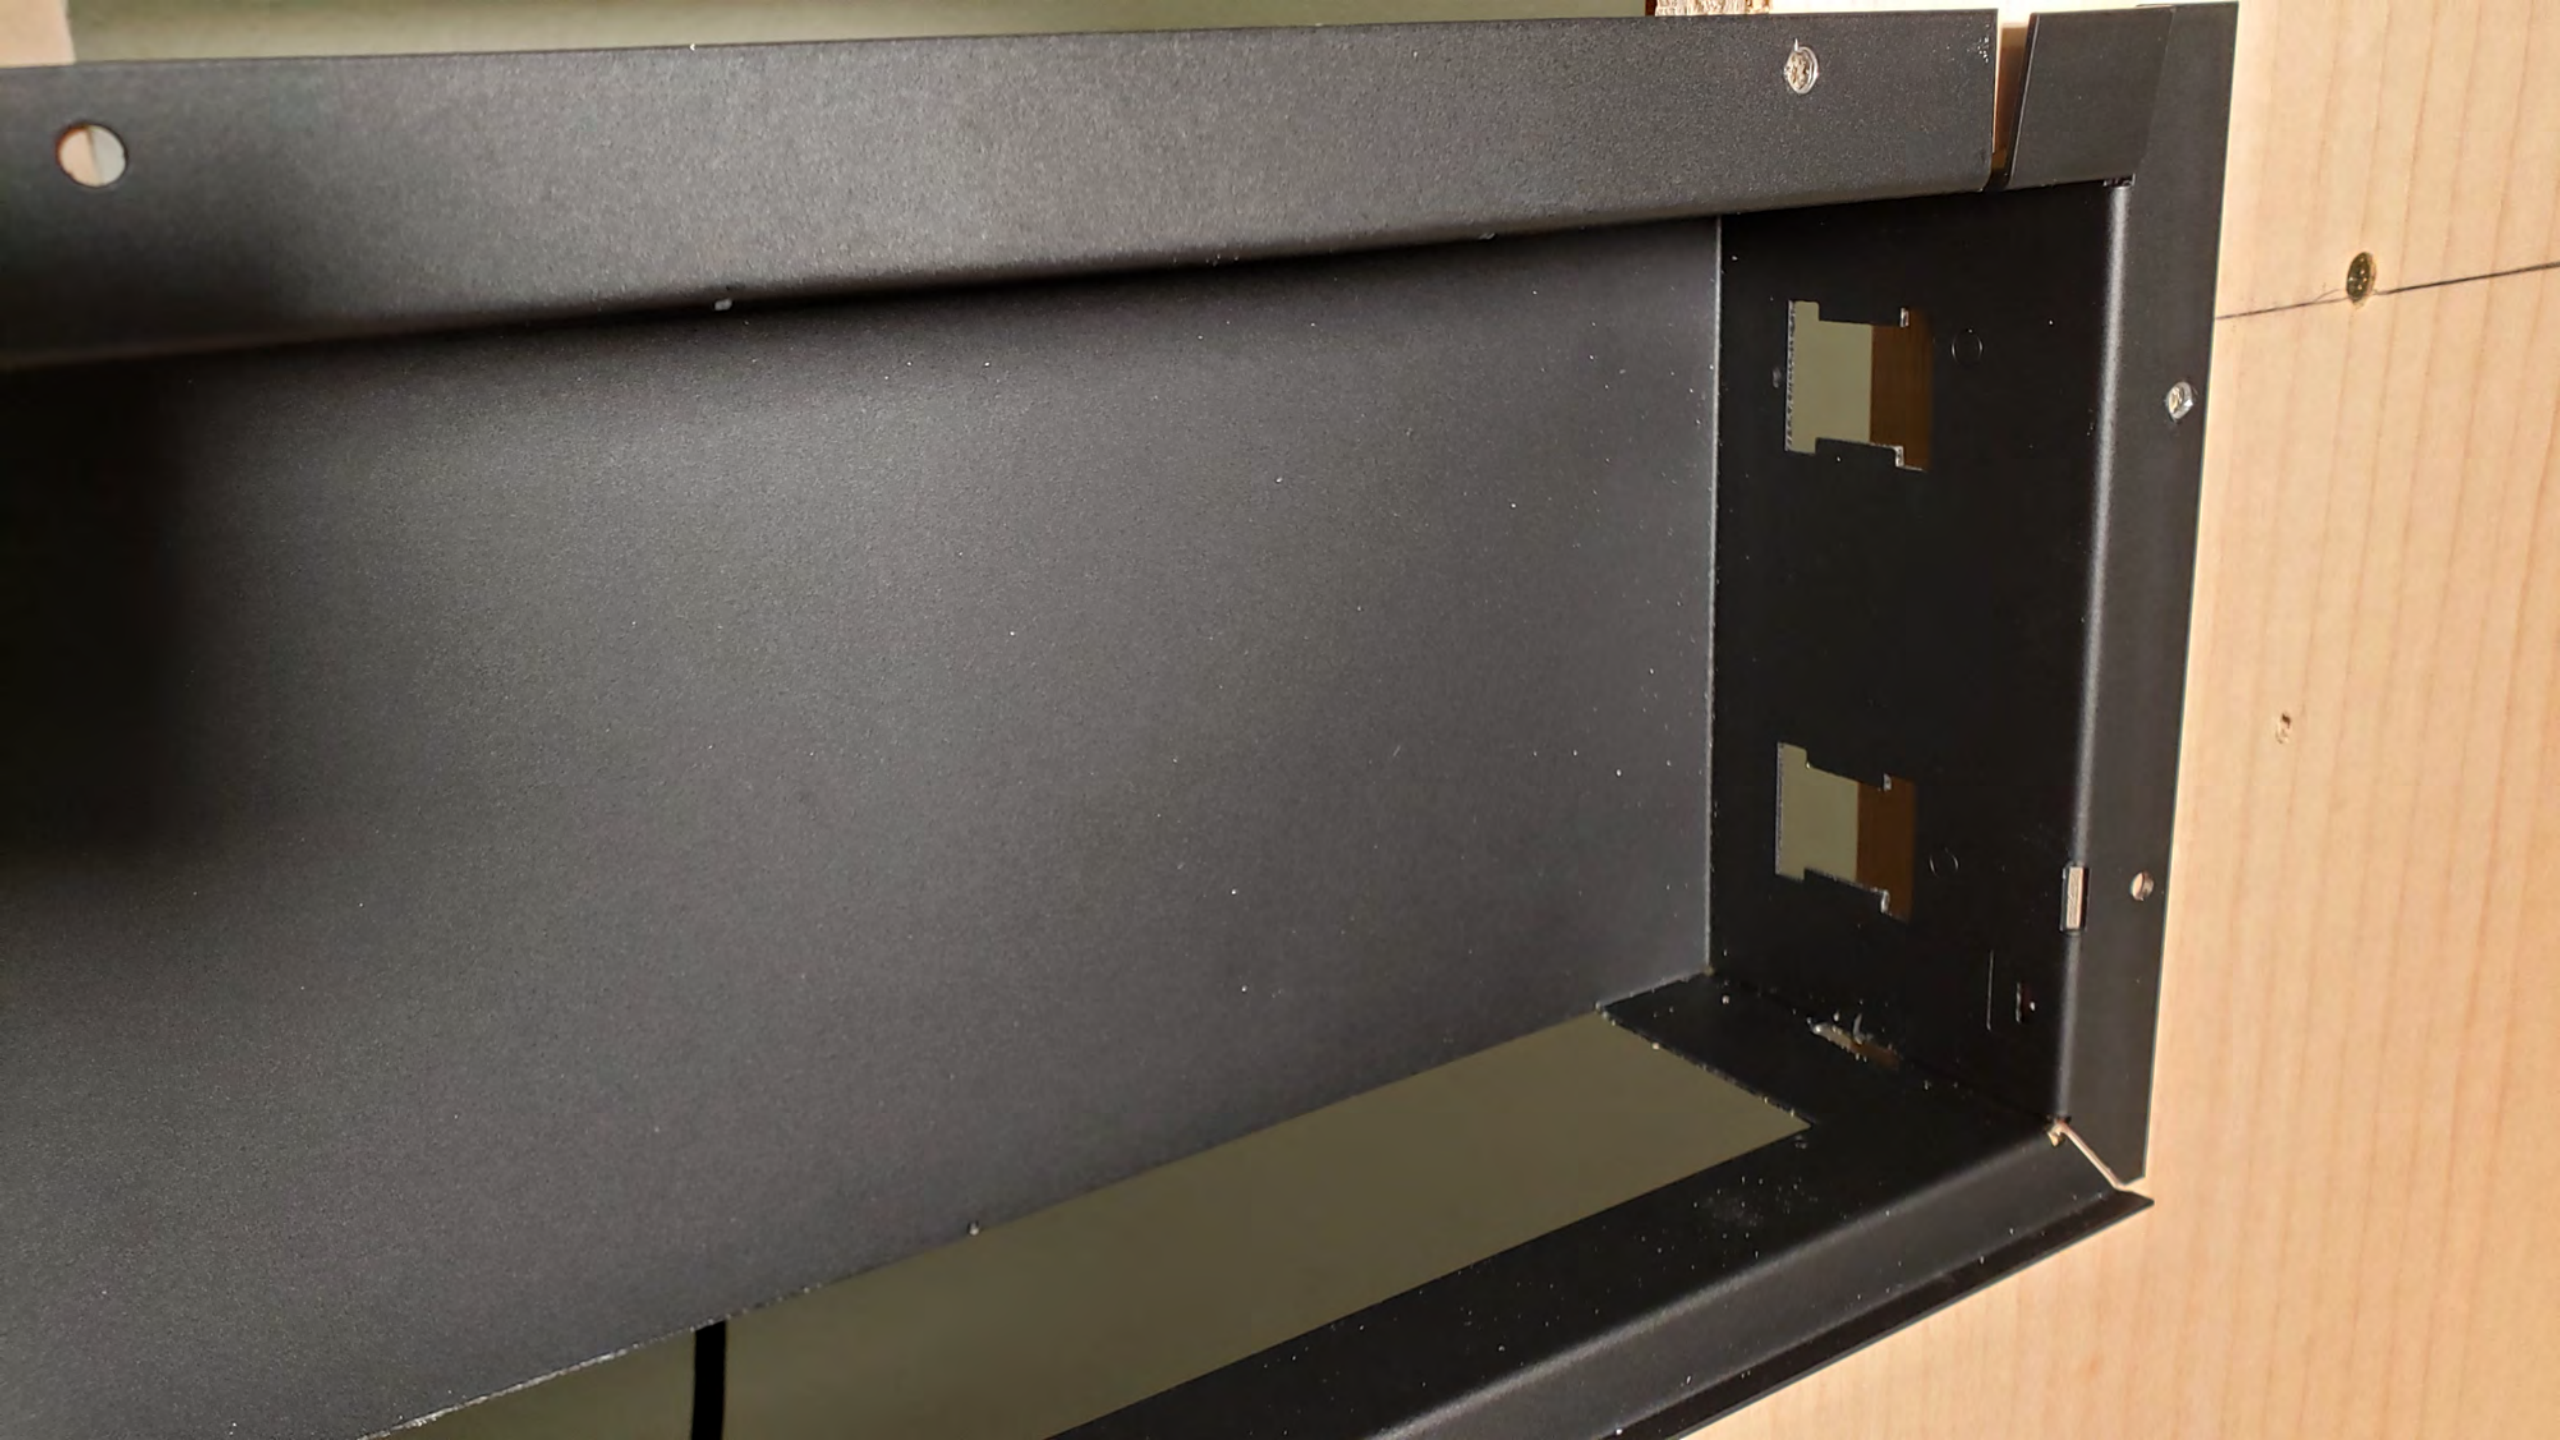


Install the upper wall clamps as shown.



Once fully seated, screw in to tighten clamp to back of wall.



Screw the RC8-CE to the adapter plate and drop it into the slot on the backbox.

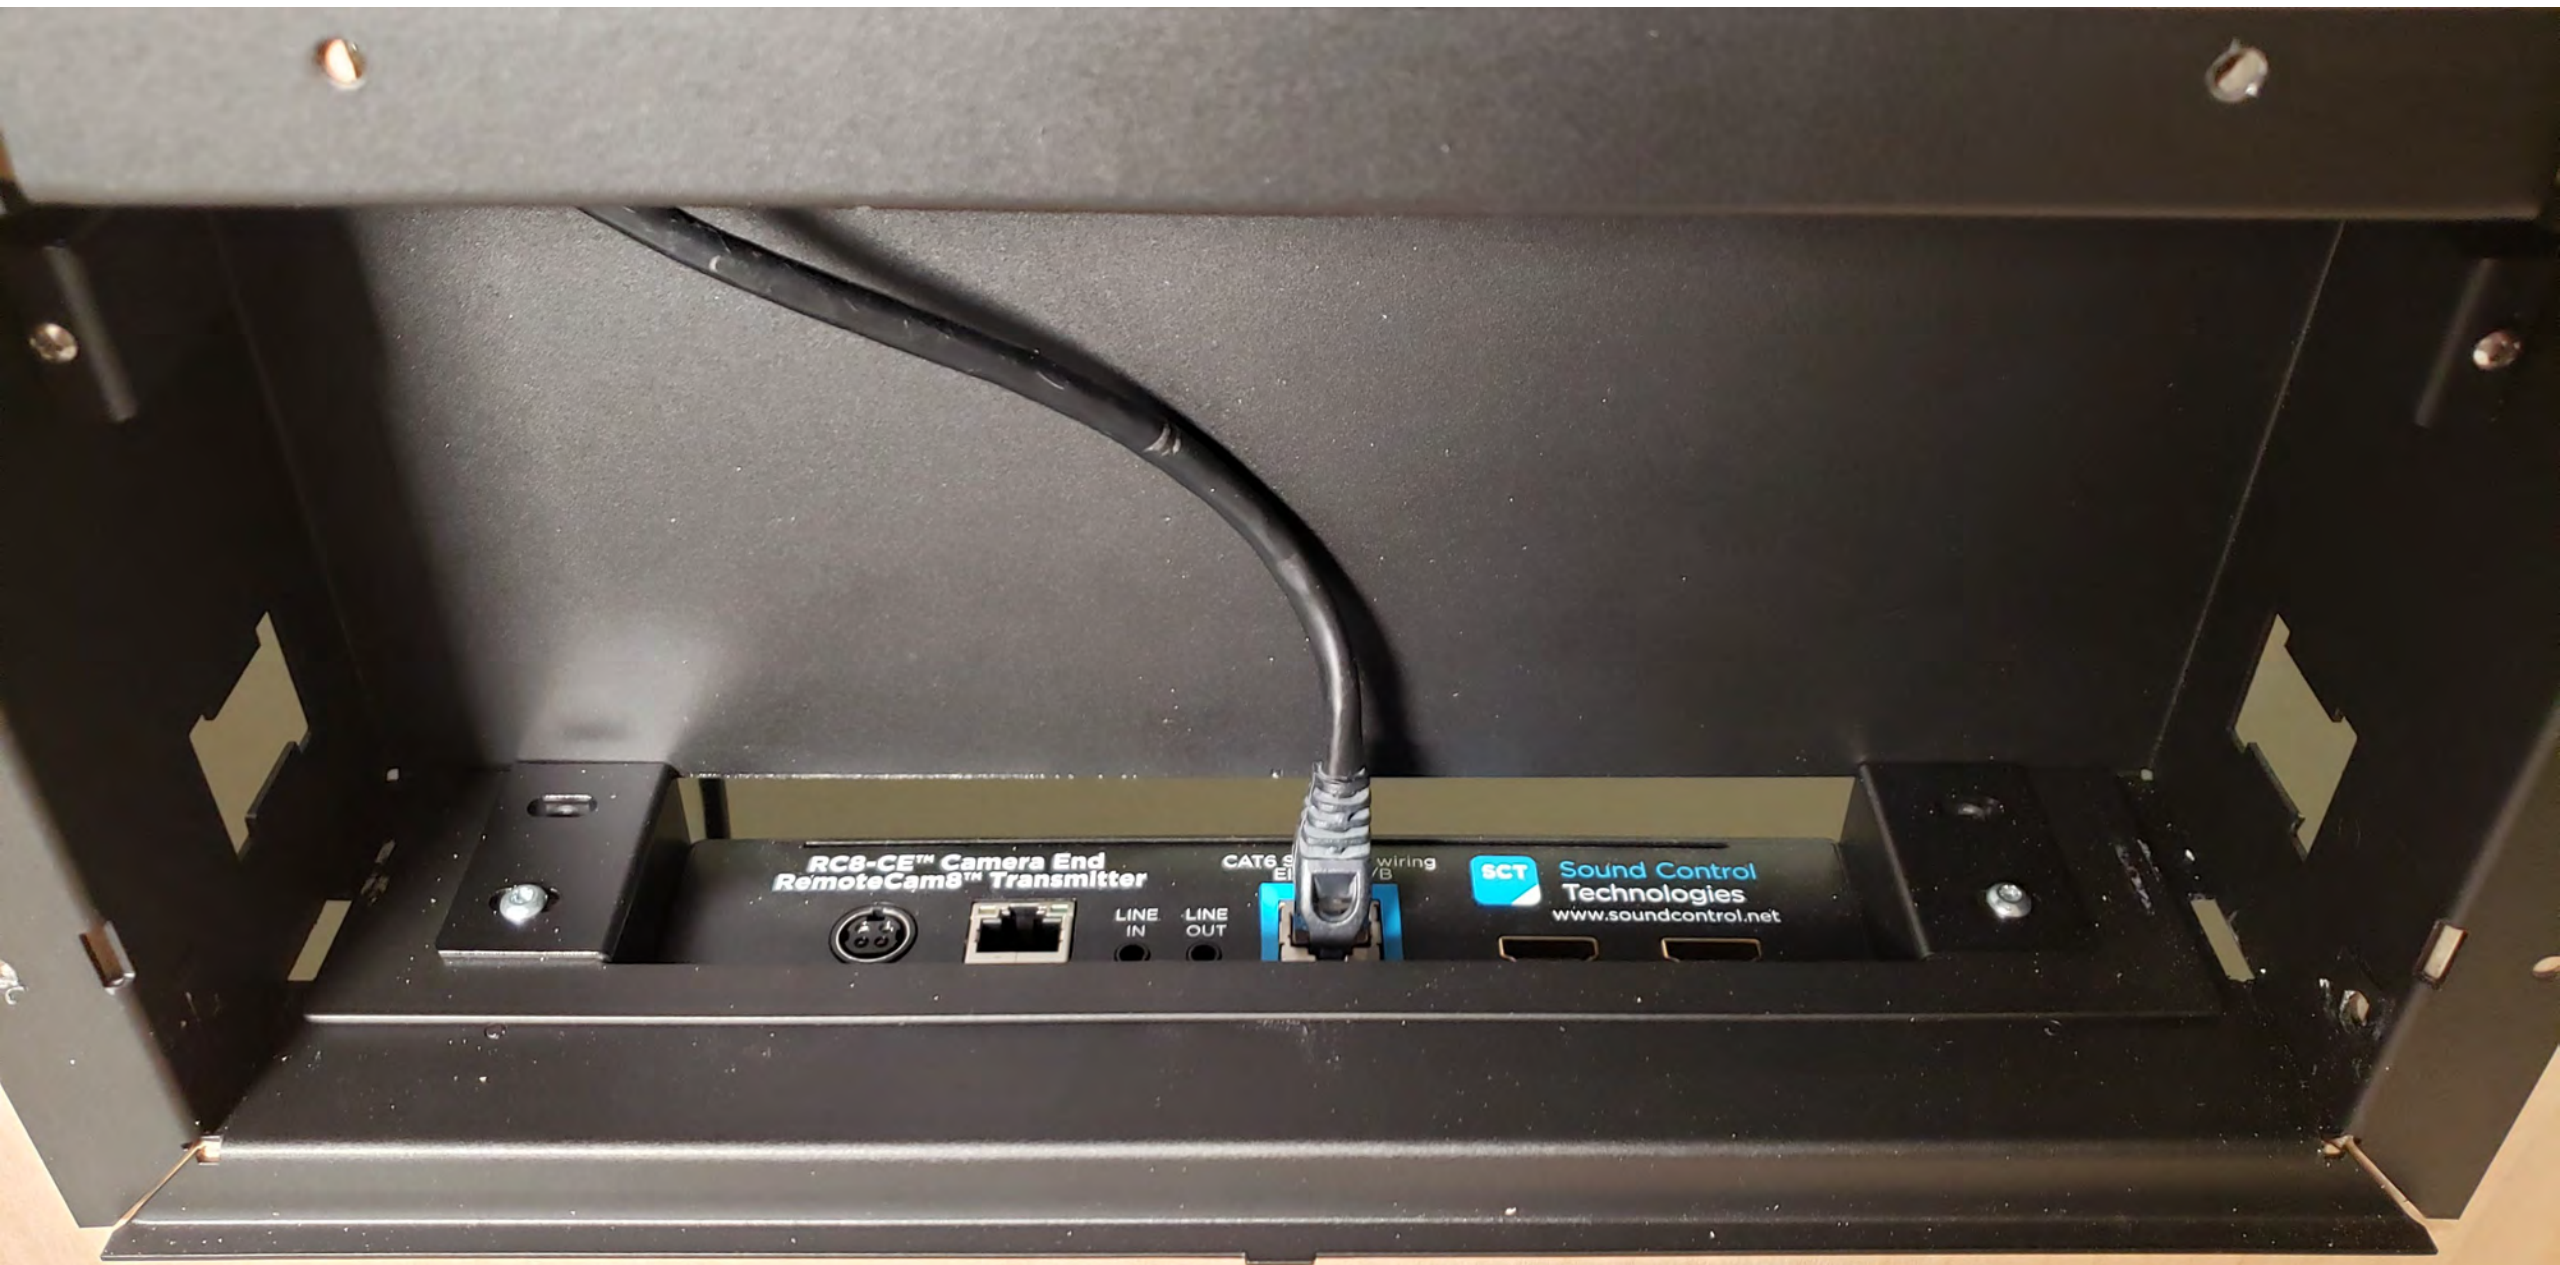

Now install the camera plate by inserting into slots of backbox. Push camera plate in as far as it will go.



Install the final two wall clamps (if using).



Finally, pry out tabs on left and right to secure camera plate.

